# **V1-T**

# Single Color LED Controller


- RF remote, O/1-10V, Push Dim (3-in-1) dimming
- 4096 levels 0-100% dimming smoothly without any flash.
- Match with RF 2.4G single zone or multiple zone dimming remote control.
- One RF controller accept up to 10 remote control.
- Auto-transmitting function: Controller automatically transmit signal to another controller with 15m control distance.
- Synchronize on multiple number of controllers.
- Connect with external push switch to achieve on/off and 0-100% dimming function.
- Light on/off fade time 3s selectable.
- Over-heat / Over-load / Short circuit protection, recover automatically.




 
#### Technical Parameters

Input and Output		Dimming data		Safety and EMC	
Input voltage	12-48VDC	Input signal	RF 2.4GHz + 0/1-10V + Push Dim		ETSI EN 301 489-1 V2.2.3
Input current	20.5A	Control distance	15m(Barrier-free space)	EAAC standard (EAAC)	ETSI EN 301 489-17 V3.2.4
Output voltage	12-48VDC	Dimming gray scale	4096 (2^12) levels	Radio Equipment (RED)	ETSI EN 300 328 V2.2.2
Output current	20A@12/24V 15A@36/48V	Dimming range	0-100%	Certification	CE,EMC,RED
Output power	240W@12V 480W@24V 540W@36V 720W@48V	Dimming curve	Logarithmic	Environment	
Output type	Constant voltage	PWM Frequency	2000Hz	Operation temperature	Ta: -30°C ~ +55°C
Warranty		Package		Case temperature (Max.)	Tc: +85°C
Warranty	5 years	Size	L120 x W80 x H34mm	IP rating	IP20
Protection	Reverse polarity, Over-heat, Over-load, Short circuit	Gross weight	0.254kg		

#### Mechanical Structures and Installations

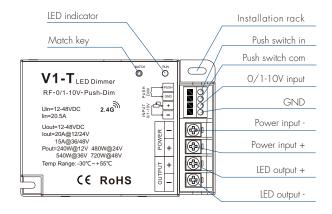

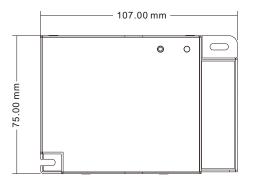



### Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

#### Use the controller's Match key

#### Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.

The LED indicator fast flash a few times means match is successful.

#### Delete:

Press and hold match key for 5s to delete all match,

The LED indicator fast flash a few times means all matched remotes were deleted.

## Use Power Restart

#### Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times quickly.

The light blinks 3 times means match is successful.

#### Delete

Switch off the power, then switch on power, repeat again.

Immediately short press on/off key (single zone remote) or zone key


(multiple zone remote) 5 times quickly.

The light blinks 5 times means all matched remotes were deleted.

# Light on/off fade time

Long press match key 5s, then short press match key 3 times, the light on/off time will be set to 3s, the indicator light blink 3 times. Long press match key 10s, restore factory default parameter, the light on/off time also restore to 0.5s.

User Manual Ver 1.1.0 Page 1

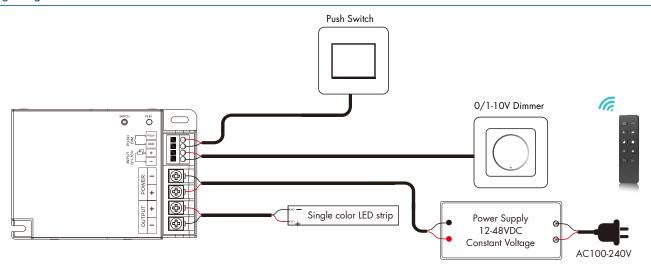

Note: The RF remote, 0/1-10V dimmer or Push switch can be connected at the same time, which makes the product more user-friendly and more options to fit for some extra-ordinary demands.

# 0/1-10V Dimming

- The 0/1-10V input is operable via commercially available simple rotary wall switchs designed for 0/1-10V dimming equipment or from decicated system central dimming controllers.
- Compliant with 0-10V, 1-10V, 10V PWM, RX(4 in 1).
- We recommend the number of LED drivers connected to 0/1-10V dimmer does not exceed 50 pieces,
   The maximum length of the wires from dimmer to LED driver should be no more than 50 meters.
- If the controller be used with the RF remote or Push-Dim interface prior to using the 0/1-10V interface, the 0/1-10 V signal should change over 10% to return 0/1-10 V control.

### Push Dim Function

The provided Push-Dim interface allows for a simple dimming method using commercially available non-latching(momentary) wall switchs.

- Short press:
  - Turn on or off light.
- Long press (1-6s):

Press and hold to step-less dimming, With every other long press, the light level goes to the opposite direction.

• Dimming memory:

Light returns to the previous dimming level when switched off and on again, even at power failure.


• Synchronization:


If more than one controller are connected to the same push switch, do a long press for more than 10s, then the system is synchronized and all lights in the group dim up to 100%.

This means there is no need for any additional synchrony wire in larger installations.

We recommend the number of controllers connected to a push switch does not exceed 25 pieces, The maximum length of the wires from push to controller should be no more than 20 meters.

### **Dimming Curve**

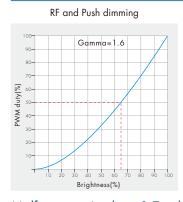

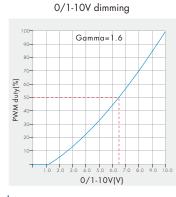

#### Installation Precautions

- 1. The products shall not be stacked, the distance should be  $\geq$  20cm, so as not to affect lifespan of the products due to poor heat dissipation.
- 2. The product shall not be installed close to the switching power supply with an interval of  $\geq$  20cm to avoid the radiation interference of the switching power supply.
- 3. The installation height shall be  $\geq 1\,\mathrm{m}$  from the floor to avoid shortening the remote control distance due to too weak reception signal.
- 4. The products are not allowed to be close to or covered by metal objects, with an interval of  $\geq$  20cm to avoid signal attenuation and shorten the remote control distance.
- 5. Avoid installation at the corner of the wall or the corner of the beam, with an interval of  $\geq$  20cm to avoid signal interference.

# Malfunctions Analysis & Troubleshooting

Malfunctions	Causes	Troubleshooting	
No light	No power.     Wrong connection or insecure.	Check the power.     Check the connection.	
Uneven intensity between front and rear,with voltage drop	Output cable is too long.     Wire diameter is too small.     Overload beyond power supply capability.     Overload beyond controller capability.	Reduce cable or loop supply.     Change wider wire.     Replace higher power supply.     Add power repeater.	
No response from the remote	The battery has no power.     Beyond controllable distance.     The controller did not match the remote.	Replace battery.     Reduce remote distance.     Rematch the remote.	

User Manual Ver 1.1.0